

This space is left intentionally blank.

COUPON SECTIONS CONTINUED

SECTION 6 - ACCEPTANCE MODE Non-Recycler Mode Only

Mode 0: Factory default. No acceptance modes active.

Mode 1*: If fraud is detected the validator enters an out-of-service time-out, the stacker plate extends into the bill magazine and the bezel LEDs flash. If any sensors are blocked, the time-out persists until the jam is cleared.

Mode 2*: All the features of Mode 1, plus the stacker plate extends into the bill magazine when idle.

Mode 3*: All the features of Mode 2, but more aggressive. It may increase jams and service calls. Mode 3 is recommended for temporary use only.

*Requires power



Talos™ Coupon Guide

Carefully cut coupon from this page or make one copy of this coupon.

Copies are usable if made on a standard, carbon-based copier. Make one copy of the original at a time, as copiers tend to reduce the size of the coupon when multiple copies are made.


Fill out the coupon using a #2 (HB) pencil. Fill in one block for each line. Do not mark the back of the coupon.

Note that Talos units are preconfigured with the following options enabled:

- Accept \$1 bills
- Four way accept

Initiating Coupon Mode on a Talos without a Recycler

1. Remove the bill magazine
2. Use a pencil or a screwdriver to press this button to enter configuration mode, then reattach the bill magazine to initiate Coupon mode:

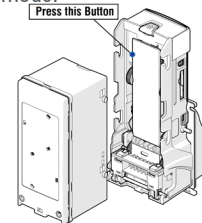

Initiating Coupon Mode on a Talos with a Recycler:

1. Hold the Mode button on the recycler to enter the menu
2. Press Mode to cycle through the options, and stop when CP is displayed
3. Press Select to initiate Coupon mode

When coupon mode is activated, the bezel lights will rapidly flash

1. Insert a completed configuration coupon
2. Watch the bezel LEDs and count the flashes when the configuration coupon is returned
3. Use this chart to confirm successful programming:

Flashes	Meaning
10	Configuration coupon accepted and unit successfully programmed.
1 - 5	Coupon rejected. Number of flashes corresponds to the coupon section that was improperly filled out. Try again.
7	Coupon not read. Confirm the coupon correct and try again.

FREE VEND COUPONS AND BILL PROGRAMMING

Follow the same process to program the Talos with bills or free vend coupons, but note that the LED codes are slightly different:


Flashes	Meaning
10	The bill or vend coupon has been enabled successfully
7	The bill validator was unable to read the bill or vend coupon. Try again.
3	The bill or vend coupon has been disabled

PROGRAMMING WITH CPI SYNQ


- Open the Simplifi app on your mobile device and tap the Synq your Talos is connected to




- Tap **Configuration**

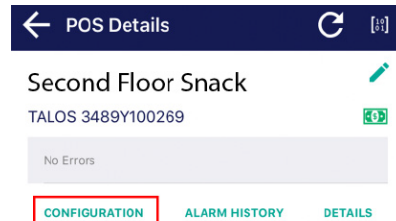

- Make your selections and tap **Update**

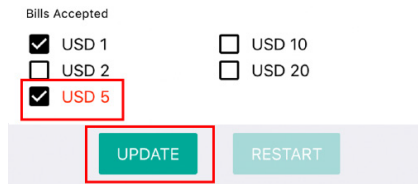

- Tap **OK** on the prompt, then tap **Restart** to save changes

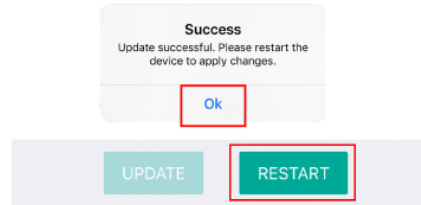

OTHER DOCUMENTATION

All support documentation, including a downloadable copy of this coupon, can be found at Cranepi.com/support.

Scan	Log in	Tap Support	Tap	Tap
			Add a Product	View Downloads
	Then	Then	Then	Then
		And select My Library	Use the filters or scroll to find Talos	Choose your Document

COUPON SECTIONS

SECTION 1 - BILL WAYS

- 1 - Face up in one direction (green seal first)
- 2 - Face up in either direction
- 4 - Face up or down in either direction

SECTION 2 - BILL ENABLES

Fill in on or off to enable or disable a bill.

SECTION 3 - MDB INTERFACE

Recycler Only

L2 - MDB Level 2. Use when accepting \$20

L3 - MDB Level 3. Use when recycling \$1, unless accepting \$20

rE - Stand alone Recycler Mode

AU - Auto-Interface. Recycler determines setting.

SECTION 4 - RECYCLED BILL

Recycler Only - Determines which bill is sent to the recycler.

SECTION 5 - RECYCLED BILL

Recycler Only

Yes - Limits high value notes as inventory depletes

No - Accepts all enabled notes

SECTION 6 - ACCEPTANCE MODE

Details on next page

Print actual size
66mm

T2700(R) Coupon

Sections 1 & 2 must be filled in

Bill ways accepted

1 1 2 4

Bill enables **on** **off**

2 \$1
\$2
\$5
\$10
\$20

Sections 3-5 for Recycler Models

MDB Interface

3
L2 L3 rE Au

Recycled Bill

4
\$1 \$5 \$10

Accept inhibit

5
ON OFF

Section 6 for Non-Recycler Models

Acceptance mode (section is optional)

6
Mode 0 Mode 1 Mode 2 Mode 3



Cut carefully on the dotted line. The coupon should be the same size as an American bill when complete.