

Cat 5 Network Cable Install Notes

Use these notes to assist you in running the CCI Cat5 network cable through the host machine.

Always make sure that the power on the host machine is turned off


STEP 1

Remove both left and right dryer computer controls.




STEP 2

Remove the screws holding the dryer controller connector and lay the panel flat inside the cavity. Perform on both sides.

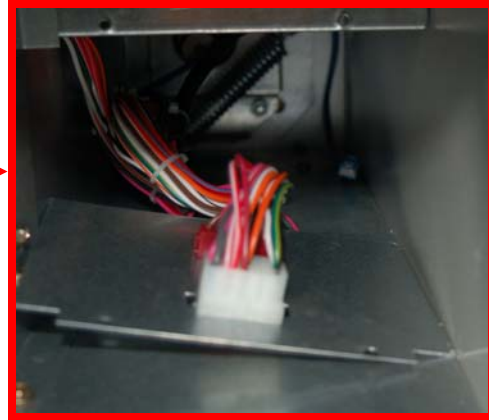

STEP 3


In the rear of the dryer feed (2) 15ft Cat5 cables into the opening just to the right of the upper motor.

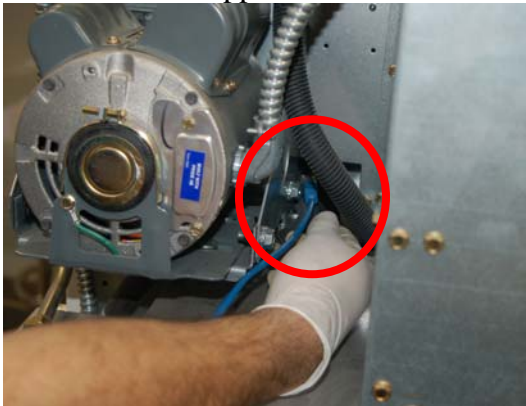

One of the two cables will be from the adjacent dryer, or a home run cable.

STEP 4

From the front of the dryer in the right side cavity you will see the two Cat 5 cables. Pull them forward

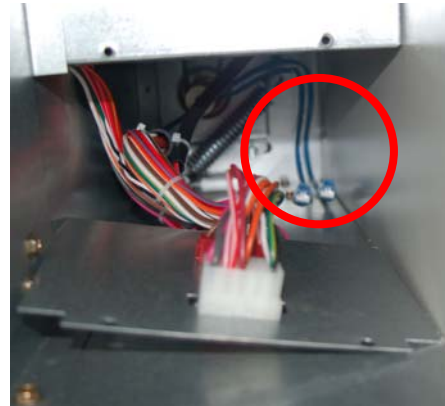

The cable from the adjacent dryer or home run will stay in this cavity.


STEP 5

The cable from the adjacent dryer or home run will stay in this cavity.

Grab the other cable along with another 7ft Cat5 cable and feed both cables through the wire channel to the left cavity. You can locate this channel by following the existing wire harness.

The channel is just behind this panel.

Push the cables until they appear on the left side cavity.

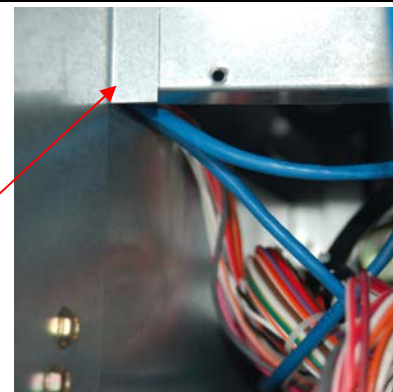

STEP 6

Remove the metal plug from the left side cavity located approximately 8 inches above the connector panel that was previously removed.

Feed the (2) Cat5 cable fed from the right side in through the back of the hole and pull the cables forward.

Pull both cables forward far enough so they can reach down through the coin drop cut out and out the coin vault opening.

Re mount the connector panel that was removed in STEP 2.



STEP 7

On the right side cavity remove the plastic grommet located approximately 8 inches above the connector panel, remove it by pushing the grommet through the panel.

Once the grommet is removed push the two remaining Cat5 cables from the back side of the panel through the opening and pull the cables forward.

Pull both cables forward far enough so they can reach down through the coin drop cut out and out the coin vault opening.

Remount the connector panel that was removed in STEP 2.



STEP 8

In the rear of the dryer take care in making sure the cables are secured to 'safe' spots on the dryer. Use mounting squares to tie cabling to back of dryer.

